
Operating instructions DEKO D2200

CONTROLPANEL

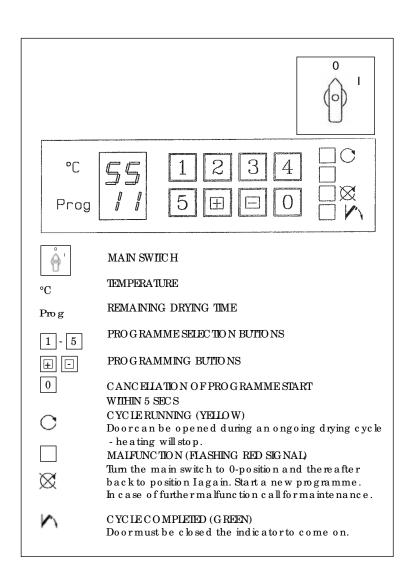

HOW TO USE DRYING CABINET

. TURN MAIN SWITCH TO POSITION I.

program going on P1 ... P5.

- 2. OPEN DOOR AND PLACE GOODS IN.

 AN-ho se cassettes into the rails at the top in front.

 CLOSE DOOR.
- Start program by pushing the program button. Yellow indicator will come on. PROG indicator shows the remaining drying time. The door can be opened during a cycle, but heating will be interrupted. By pushing the button + during the cycle PROG indicator shows the
- 4. GREEN SIGNAL- PROGRAM COMPLEIED,
 THE DOOR CAN BE OPENED.
 Indic a tor lights up only when the door is closed.



5. WHEN THE CABINET IS NOT BEING USED PLEASE SWITCH OFF BY THE MAIN SWITCH.

In pass-through models (with double doors) ye llow signal lights at "clean side" during the cycle. When the cycle ends ye llow signal at "clean side" switches to green and at "unclean side" both ye llow and green are lit at the same time. After opening the door at "clean side" the ye llow indicator switches off and at "unclean side" only the green light is on.