

High Sparkle Glass and Dishwashing Experience

The new, easy to use, technology used in the Optima 500 guides you through the functions and systems of the machine. The soft-touch panel with multic homatic start key and read out display keeps you informed of the machine's startus. Any faults are immediately shown on the screen via the self diagnostic program. The innovative rinse system combined with the choice of 6 programs guarantees that the Optima 500 meets the highest levels of sanitation.



Optimale ase of use with the innovative multicolour start function & peace of mind maintenance.

The soft-touch panel with multicolour key will lead you in an easy and intuitive way through the operation of your machine. The LCD display will clearly indicate temperatures, cycles and functions:

WHIE	: Settings
RED	: Pre-he a ting
G REEN	: Ready for use
BLUE	: Cycle running

Each Optima has self diagnostics, an innovative the mochone final mise, six programs and high quality sanitation process. When you buy an Optima system we not only guarantee good results, we also guarantee peace of mind maintenance with our Optima Support Service.

Wash Programs

The Optima 500 has 6 programs to choose from: two wash/mise programs (standard & long); two special glass washing programs (at 70°C) and two "clean" programs. During a "clean" cycle all the wash tank water is refreshed with clean water. This is ideal when switching between heavily soiled plate washing and glass washing or for infection control purposes in hospital wards. At the end of the wash cycle the start key flashes between blue and green making it easy to identify during peak periods.

RHIMA Intensive Final Rinse System

The unique final rinse system is to tally independent of mains pressure and temperature. With traditional systems incoming water forces the $82^{\circ}\mathrm{C}$ water in the booster tank into the nozzles. The result of this method is that towards the end of the rinse cycle the temperature drops because incoming temperature mixes with booster temperature. The new Rhima final rinse does not allow any water to enter the booster heater until the end of the rinse cycle. This guarantees a constant minimum 82°C final rinse which is essential formeeting HACCP guide lines.

Overall

The Optima 500 can be complemented with compartmentalised washing racks for glass washing.





OPIIMA 500 - SPECIFICATIONS

TECHNICAL DATA


Racks per hour (qty) 1	12 - 60
Cycle times ²	75-300 sec
Power connection	240V - 50Hz or 415V - 50Hz
Wash pump (W)	650
Rinse pump (W)	250
Booster heater (W)	2950 or 6000
Tank heater (W)	1100
Max load	3600W(15Amp)or6650W(3x10Amp)
Wash tank capacity normal	10 ltrs
Wash tank capacity clean cycle	7 ltrs
Booster heater capacity	14 ltrs
Water consumption normal	2.5 ltr/cycle
Water consumption clean	7 ltr/cycle
Rack size	500x500
Max door height	340mm
Water connection	3/4" BSP F hose supplied
Water connection temperature	max. 65°C
Drain	pump out max 1 mtr


¹ depends on chosen program and inlet water temperature

UNIQUE FEATURES OF THE RHIMA OPTIMA 500:

- Specifically suited for connection to Rhima's RO 120 High Sparkle System
- Many standard inclusions such as; detergent pump, rinse aid injector, CIP (cleaning in place) program, drain pump, breaktank, full the mal and acoustic insulation
- The rmochrone final rinse
- Self cleaning wash jets
- Read out display with language selection
- Cycle run time indicator
- Six programs including two "clean" cycles
- Intensive final rinse
- Deep formed and rounded tank construction
- Energy saving
- The rmo sto p

OPIIMA 500 - DIMENSIONS

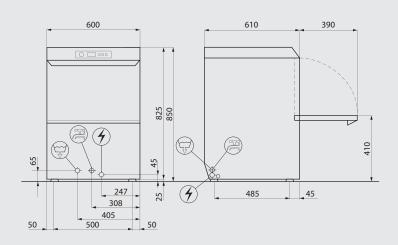

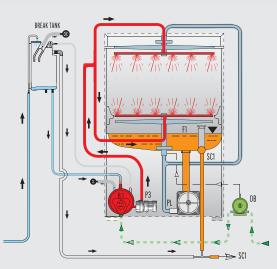

The Rhima intensive rinse system.

² depends on chosen program